

GOLDAIR

Donut Maker

Model FDM110

OPERATING INSTRUCTIONS



FDM110: 220 - 240V~, 50Hz, 700W, Donut Maker

Thank you for choosing a Goldair electric Donut Maker. This Goldair appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

GENERAL CARE AND SAFETY GUIDE

ALWAYS

- ✓ Always ensure hands are dry before handling the plug or the Donut Maker.
- ✓ Always operate the Donut Maker on a secure, dry, level surface.
- ✓ Always allow adequate air space above and on all sides for air circulation. Do not allow the Donut Maker to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. Do not use under cupboards or curtains.
- ✓ Caution is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
- ✓ Always be sure to unplug from the socket when not in use and before cleaning.
- ✓ Always allow the Donut Maker to cool before cleaning and storing.
- ✓ Carry out regular checks of the supply cord to ensure no damage is evident.
- ✓ Return the Donut Maker after a malfunction, or if it has been damaged in any manner to an authorised electrician for examination, repair or adjustment as special purpose tools are required.
- ✓ Take care not to scratch the special coating of the cooking plate. Use a wooden or heat resistant plastic spatula.

CAUTION:


THE DONUT MAKER GENERATES HEAT AND STEAM DURING USE. PROPER PRECAUTIONS MUST BE TAKEN TO PREVENT THE RISK OF BURNS, SCALDS, FIRES OR OTHER DAMAGE TO PERSONS.

NEVER

- ✗ Never touch hot surfaces.
- ✗ Never use this appliance outdoors.
- ✗ Never use this appliance for any purpose other than its intended use. This appliance is for household use only.
- ✗ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the Donut Maker by a person responsible for their safety.
- ✗ Close supervision is necessary when the appliance is near children.
- ✗ Never leave the appliance unattended when in use.
- ✗ Never place this appliance on or near a hot gas or electric burner or where it could touch a heated oven or microwave oven.
- ✗ Exercise caution if using foodstuffs containing sugar or products containing jam or preserves, as the fillings may become very hot.
- ✗ Never immerse any part of the Donut Maker, or cord set and plug in water or any other liquid to protect against electrical hazards.
- ✗ Never use harsh, abrasive or caustic cleaners to clean this appliance.
- ✗ Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any manner.
- ✗ The Donut Maker is not intended to be operated by means of an external timer or separate remote-control system.

COMPONENTS

FDM110

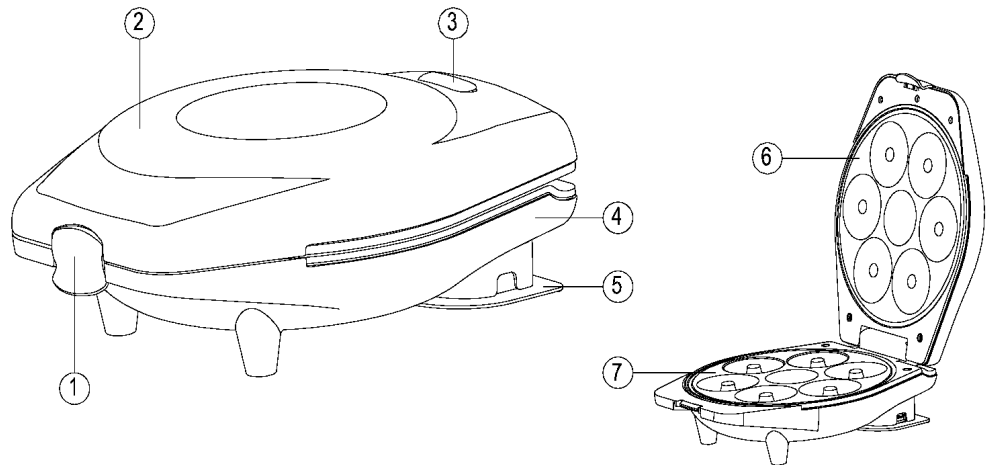

- 1.Lid Latch
- 2.Upper Housing
- 3.Ready Indicator
- 4.Bottom Housing
- 5.Power Cover
- 6.Upper Non-stick Plate
- 7.Bottom Non-stick Plate

OPERATING YOUR DONUT MAKER

Before using the appliance for the first time, peel off any promotional materials and packaging materials, and check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth. For best results, pour a teaspoon of vegetable oil on to the non-stick plates. Spread over with an absorbent kitchen towel and wipe off any excess oil.

When your Donut Maker is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

- ★ Inset the pin plug into the power outlet, you will notice that the ready indicator will go on, indicating that the Donut Maker has begun preheating.
- ★ Allow your Donut Maker to pre-heat until the ready indicator goes out. This indicates that the cooking plates have reached the correct temperature for cooking.
- ★ For best results, lightly spray the cooking plates with a cooking oil spray before using. This will assist in the removal of the donuts after cooking.
- ★ Divide mixture into pan holes as per recipes using a jug & spoon or fabric piping bag.
- ★ Note: Do not use disposable plastic piping bags as these may melt if they come into contact with hot plates.
- ★ Gently close the lid, ensuring the latch locks in place. Do not slam the lid down as it may cause the mixture to run off the cooking plates.
- ★ Allow to cook for approximately 3- 5 minutes or until golden.
- ★ To remove donuts, always use a plastic or wooden spatula. Never use a sharp object or metal, as this will damage the non-stick surface of cooking plates.

CAUTION: STEAM MAY BE EJECTED FROM BETWEEN THE PLATES DURING THE COOKING PROCESS. TAKE CARE NOT TO COME INTO CONTACT WITH THE STEAM AS IT MAY CAUSE BURNS. ENSURE THE CORD HAS BEEN FULLY UNWOUND BEFORE EVERY USE.

OPERATING YOUR DONUT MAKER CONTINUE

CLEANING AND CARE

- ★ Always turn off the power and remove the plug after and before cleaning.
- ★ The cooking plates are coated with non-stick cooking surface, therefore little cleaning is required. Simply wipe cooking plates over with a damp cloth.
- ★ Do not immerse the donut maker in water or other liquid.
- ★ Do not use abrasive scouring pads, powders or cleaners.
- ★ Do not place in the dishwasher.
- ★ Before next use, lightly grease the cooking plates for easy removal of cooked donuts.

STORAGE

- ★ Always unplug the Donut Maker before storage.
- ★ Always make sure the Donut Maker is cool and dry before string.
- ★ To minimize storage space in your kitchen, the donut maker can be stored vertically.

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

North Shore City, Auckland, New Zealand
Monday – Friday 8am-5pm
Phone: 0800 232 633
Website: www.goldair.co.nz

GOLDAIR

Your Goldair product has been inspected and tested and is guaranteed subject to the following for a period to two years from the date of purchase against defects in workmanship and materials. During this period, such defects will be rectified by repair or replacement of the product purchased. Your product contains no user serviceable components and this warranty becomes invalid if in our opinion the product has been misused, abused, incorrectly installed, tampered with, connected to an electrical supply not corresponding with the name plate specification, or subjected to power surges. The warranty does not include any labour or other associated expense that may be involved in removal or installation of the product. Normal wear and tear is expressly excluded.

If your Goldair product fails to operate satisfactorily, please return it to the retailer from whom it was purchased. To obtain a repair or replacement product under this warranty, you will need to produce satisfactory evidence of date of purchase. The completed warranty and purchase receipt must be presented with the product. The warranty should be filled out at the time of purchase. It is in your interest to make sure this is done.

If the product is to be replaced (cannot be repaired) then that replacement will be of the same or similar product or accessory excluding packaging, instruction card etc. Where a replacement product is supplied, this shall be guaranteed for the balance of the original warranty period.

Any model that is no longer available will be replaced by a model of a value and with such features as we consider appropriate in the circumstances. Goldair Ltd is not responsible for freight forwarding charges, losses or damage in transit.

If service is required after the warranty period has expired, the product should be returned to a qualified electrical technician. Service outside of the warranty period will be at your cost.

Consumers Guarantee Act (1993).

In accordance with the above act consumers are advised that: The manufacturer does not undertake that repair facilities and parts are necessarily available for this product.

If any of the provisions of the foregoing are contrary to any relevant legislation, then that provision shall be deemed to be excluded from the warranty and the rest of the provisions will continue to apply.

IMPORTANT: PLEASE RETAIN THIS WARRANTY CARD

NAME: _____

ADDRESS: _____

PURCHASED FROM: _____

SUBURB: _____

DATE OF PURCHASE: _____

NAME OF PRODUCT: _____

MODEL No: _____

TWO YEAR WARRANTY