

# GOLDAIR

## Egg Cooker

Model FEC210

### OPERATING INSTRUCTIONS



FEC210: 220 - 240V~, 50Hz, 350W, Egg Cooker

---

Thank you for choosing a Goldair electric Egg Cooker. This Goldair appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

---

## GENERAL CARE AND SAFETY GUIDE

### ALWAYS

- ✓ Always ensure hands are dry before handling the plug or the Egg Cooker.
- ✓ Always operate the Sandwich Maker on a secure, dry, level surface.
- ✓ Always allow adequate air space above and on all sides for air circulation. Do not allow the Egg Cooker to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. Do not use under cupboards or curtains.
- ✓ Caution is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
- ✓ Always be sure to unplug from the socket when not in use and before cleaning.
- ✓ Always allow the Egg Cooker to cool before cleaning and storing.
- ✓ Carry out regular checks of the supply cord to ensure no damage is evident.
- ✓ Return the Egg Cooker after a malfunction, or if it has been damaged in any manner to an authorised electrician for examination, repair or adjustment as special purpose tools are required.
- ✓ Take care not to scratch the special coating of the cooking plate. Use a wooden or heat resistant plastic spatula.

### **CAUTION:**


THE EGG COOKER GENERATES HEAT AND STEAM DURING USE. PROPER PRECAUTIONS MUST BE TAKEN TO PREVENT THE RISK OF BURNS, SCALDS, FIRES OR OTHER DAMAGE TO PERSONS.

### NEVER

- ✗ Never touch hot surfaces.
- ✗ Never use this appliance outdoors.
- ✗ Never use this appliance for any purpose other than its intended use. This appliance is for household use only.
- ✗ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the Egg Cooker by a person responsible for their safety.
- ✗ Close supervision is necessary when the appliance is near children.
- ✗ Never leave the appliance unattended when in use.
- ✗ Never place this appliance on or near a hot gas or electric burner or where it could touch a heated oven or microwave oven.
- ✗ Exercise caution if using foodstuffs containing sugar or products containing jam or preserves, as the fillings may become very hot.
- ✗ Never immerse any part of the Egg Cooker, or cord set and plug in water or any other liquid to protect against electrical hazards.
- ✗ Never use harsh, abrasive or caustic cleaners to clean this appliance.
- ✗ Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any manner.
- ✗ The Egg Cooker is not intended to be operated by means of an external timer or separate remote-control system.

# COMPONENTS

FEC210

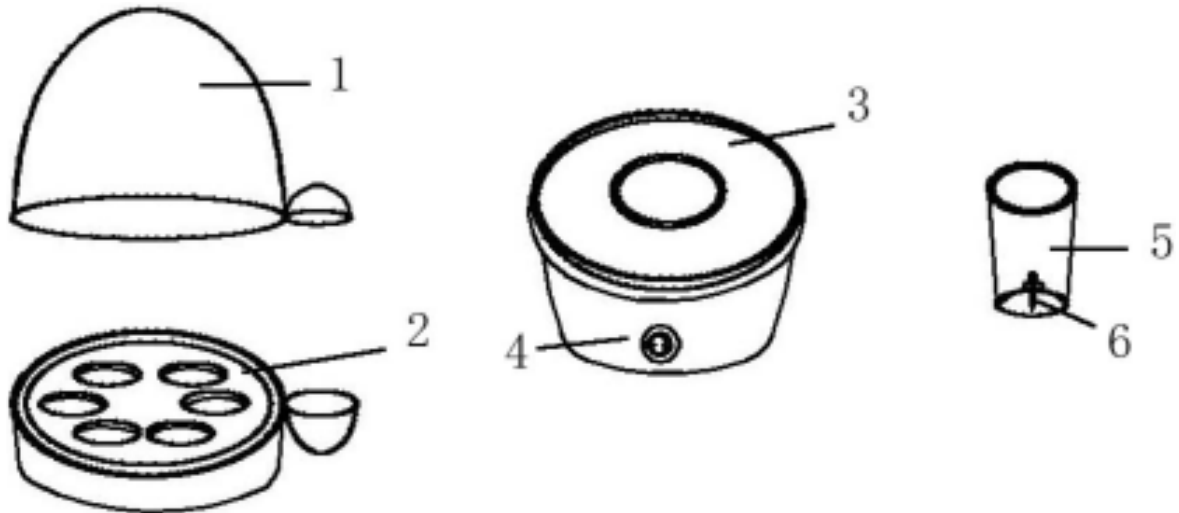

1. Top cover
2. Egg rack with Egg Pierce
3. Heating pan
4. ON/OFF switch with light and ready buzzer
5. Measuring cup
6. Prick

## Ready buzzer

Buzzer sounds to indicate eggs are ready

## On light

Indicates the unit is operating

## Egg rack

Boil 1 to 6 eggs at one time, to your desired Firmness

## Poaching trays

## Non-stick heating vessel

Provides an easy to clean surface

## Cover

Fits neatly over eggs during cooking

## Measuring cup

Accurate amounts of water can be Measured to boil or poach eggs to desired Firmness

## Egg piercer

Piercing eggs prevents them cracking during cooking

# OPERATING YOUR EGG COOKER CONTINUED.

## Boiling eggs

Up to 6 eggs can be held at one time.

- ★ Place the base on a dry level surface.
- ★ Using the Measuring Cup, measure the amount of water required and pours into heating pan. Use cold tap water.

### Example:

- ★ For 2 soft eggs, refer to the section marked “Soft” on the Measuring Cup and fill the cup to the line marked 2.
- ★ For 3 hard boiled eggs, refer to the section marked “ Hard” on the Measuring Cup and fill to the line mark 3. Please refer to Table 1.

- ★ Eggs have an air pocket in the large end and they can crack during cooking as the air expands from the heat. Thus piercing eggs prevents them from cracking during cooking. Pierce the large end of the egg using the Egg Pierce which is the pin on the egg rack. To do this. Simply place the large end of the egg against the Egg Pierce and the puncture the egg with extra care.

**Caution:** Avoid injuries from the egg pierce.

- ★ Position the Egg Rack over the Heating Vessel and place the eggs in the Egg Rack with the large ends facing down.
- ★ Place the Cover over the eggs.
- ★ Insert the 3 pin plug into a 230~240 volt AC power outlet and turn the power on to commence cooking, press the ON/OFF switch to position “1”. Once all the water has evaporated, the unit will “BUZZ” to signal that the eggs are ready or cooked to the desired firmness. Press the ON/OFF switch to “0” (off) position.
- ★ Unplug the unit.
- ★ Carefully remove the top cover slowly by grasping the cover handle at the end and lifting up This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given up.

**WARNING: Unit is still hot, extra care should be taken to avoid any injury or burn that may result from hot steam**

- ★ Remove the egg rack with the cooked eggs using the handle. Hold the eggs in the egg holder under cold water for about 30 seconds to prevent them from further cooking.
- ★ Allow egg cooker to cool down completely before discarding any remaining water from the base.
- ★ Clean after each use. Refer to CLEANING INSTRUCTIONS.

Approximately cooking times are as follows:

Soft	6-8 minutes
Medium	9-11minutes
Hard	16-20minutes

These cooking times are guideline only. **Cooking times may vary and are affected by factors such as:**

- Number and size of eggs cooked
- Temperature of eggs prior to cooking
- Temperature and amount of water used
- Length of time eggs remain in cooker following cooking cycle

The measures on the measuring cup are based on eggs used at room temperature

Standard (60g ) eggs have been used

**Note:** You may need to add more water for refrigerated or larger eggs. Also eggs will be firmer if more water is used and softer if less is used. You will quickly learn to adjust the water level to boil eggs just the way you want

**WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given

# GOLDAIR

## **SUPPORT AND TECHNICAL ADVICE**

North Shore City, Auckland, New Zealand  
Monday – Friday 8am-5pm  
Phone: 0800 232 633  
Website: [www.goldair.co.nz](http://www.goldair.co.nz)

# GOLDAIR

Your Goldair product has been inspected and tested and is guaranteed subject to the following for a period to two years from the date of purchase against defects in workmanship and materials. During this period, such defects will be rectified by repair or replacement of the product purchased. Your product contains no user serviceable components and this warranty becomes invalid if in our opinion the product has been misused, abused, incorrectly installed, tampered with, connected to an electrical supply not corresponding with the name plate specification, or subjected to power surges. The warranty does not include any labour or other associated expense that may be involved in removal or installation of the product. Normal wear and tear is expressly excluded.

If your Goldair product fails to operate satisfactorily, please return it to the retailer from whom it was purchased. To obtain a repair or replacement product under this warranty, you will need to produce satisfactory evidence of date of purchase. The completed warranty and purchase receipt must be presented with the product. The warranty should be filled out at the time of purchase. It is in your interest to make sure this is done.

If the product is to be replaced (cannot be repaired) then that replacement will be of the same or similar product or accessory excluding packaging, instruction card etc. Where a replacement product is supplied, this shall be guaranteed for the balance of the original warranty period.

Any model that is no longer available will be replaced by a model of a value and with such features as we consider appropriate in the circumstances. Goldair Ltd is not responsible for freight forwarding charges, losses or damage in transit.

If service is required after the warranty period has expired, the product should be returned to a qualified electrical technician. Service outside of the warranty period will be at your cost.

Consumers Guarantee Act (1993).

In accordance with the above act consumers are advised that: The manufacturer does not undertake that repair facilities and parts are necessarily available for this product.

If any of the provisions of the foregoing are contrary to any relevant legislation, then that provision shall be deemed to be excluded from the warranty and the rest of the provisions will continue to apply.

## IMPORTANT: PLEASE RETAIN THIS WARRANTY CARD

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

PURCHASED FROM: \_\_\_\_\_

SUBURB: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_

NAME OF PRODUCT: \_\_\_\_\_

MODEL No: \_\_\_\_\_

**TWO YEAR WARRANTY**