

# GOLDAIR

## Geneva™ Kettle

Model FK310

### OPERATING INSTRUCTIONS



FK310: 220 - 240V~, 50Hz, 1850-2200W, Geneva Kettle

---

Thank you for choosing a Goldair Electric Kettle . This Goldair appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

---

## GENERAL CARE AND SAFETY GUIDE

### ALWAYS

- ✓ Always ensure hands are dry before handling the plug or the Kettle .
- ✓ Always operate the Kettle on a secure, dry, level surface.
- ✓ Always allow adequate air space above and on all sides for air circulation. Do not allow the Kettle to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. Do not use under cupboards or curtains.
- ✓ Always be sure to unplug from the socket when not in use and before cleaning.
- ✓ Always allow the Kettle to cool before cleaning and storing.
- ✓ Carry out regular checks of the supply cord to ensure no damage is evident.
- ✓ Return the Kettle after a malfunction, or if it has been damaged in any manner to an authorised electrician for examination, repair or adjustment as special purpose tools are required.


### NEVER

- ✗ Never touch hot surfaces.
- ✗ Never use this appliance outdoors.
- ✗ Never use this appliance for any purpose other than its intended use. This appliance is for household use only.
- ✗ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the Kettle by a person responsible for their safety.
- ✗ Close supervision is necessary when the appliance is near children.
- ✗ Never leave the appliance unattended when in use.
- ✗ Never place this appliance on or near a hot gas or electric burner or where it could touch a heated oven or microwave oven.
- ✗ Never immerse any part of the Kettle , or cord set and plug in water or any other liquid to protect against electrical hazards.
- ✗ Never use harsh, abrasive or caustic cleaners to clean this appliance.
- ✗ Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any manner.
- ✗ The Kettle is not intended to be operated by means of an external timer or separate remote-control system.

### **CAUTION:**

THE KETTLE GENERATES HEAT AND STEAM DURING USE. PROPER PRECAUTIONS MUST BE TAKEN TO PREVENT THE RISK OF BURNS, SCALDS, FIRES OR OTHER DAMAGE TO PERSONS.

# COMPONENTS

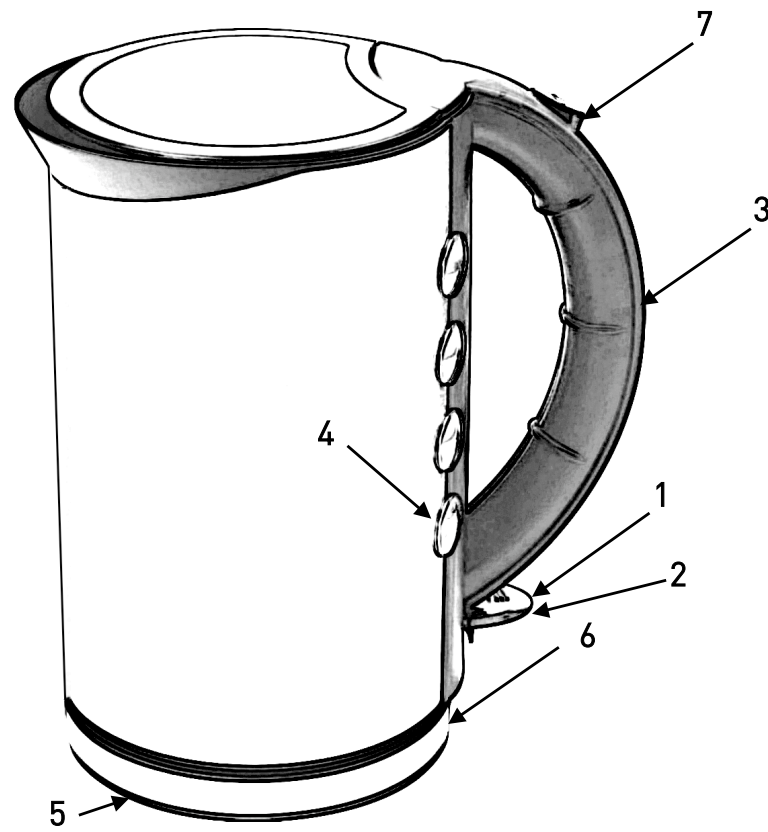

1. Switch
2. Power Light
3. Handle
4. Water Gauge
5. Power Base
6. Power Cord
7. Lid Button

# FEATURES

- ★ Automatic cut out boil-dry protection.
- ★ Easy read water gauge.
- ★ High quality thermostat.
- ★ 360 degree rotational power base.
- ★ Brushed Aluminium body.
- ★ Cord storage in power base to adjust to desired length.

# OPERATING YOUR KETTLE

For first time use it is recommended that you fill the kettle to the maximum level mark with fresh tap water, boil, and empty the kettle at least two times to clear the kettle of any dust or materials from the manufacturing process. Do not drink this water.

1. Remove the kettle from the base to fill it. Press the two buttons on either side of the lid inwards simultaneously to open it. Pour water into the kettle to the desired level, (no less than MINIMUM and no more than MAXIMUM) press the lid shut and place the kettle back on the base unit.  
**CAUTION:** Too little water may damage the heating element and too much water may cause water to splatter from the kettle.
2. Connect the plug into a power outlet (220-240V~), turn the kettle on by pressing the switch. Ensure the kettle is positioned so the spout is facing away from you.
3. The kettle will automatically switch itself off once the water has boiled and the blue neon light goes off.
4. Lift the kettle from the base and pour the water into a container or cup.

**WARNING: POSITION THE LID SO THAT STEAM IS DIRECTED AWAY FROM THE HANDLE.**

**WARNING: DO NOT REMOVE THE LID WHILE THE WATER IS BOILING**

**USE ONLY THE STAND PROVIDED WITH THIS APPLIANCE**

**CAUTION: DO NOT OPERATE THE KETTLE ON AN INCLINED PLANE**

**DO NOT MOVE WHILE THE KETTLE IS SWITCHED ON**

**CAUTION: INSURE THAT THE KETTLE IS SWITCHED OFF BEFORE REMOVING IT FROM ITS STAND**

## CARE AND CLEANING

1. Do not attempt to dismantle the kettle or power base. There are no user serviceable parts. For service or repair, contact an authorised electrician.
2. To prolong the kettle's life, please clean the mineral deposits in the kettle regularly.
3. Always unplug from the plug socket and allow to cool down before cleaning.
4. Do not immerse the power cord, kettle or power base in water.
5. Do not use chemicals, steel wool, or abrasive cleaners to clean the outside of the kettle as these will scratch the surface and fade the outside color.
6. Periodical de-scaling is required. The interval of de-scaling depends on the hardness of water in your area and the frequency of using the kettle.

### Cleaning Method:

1. Fill the kettle with 0.5lt of white vinegar and the remainder with water and allow to stand for at least one hour.
2. Empty the solution from the kettle. Wipe the remaining deposits with a damp cloth.
3. Fill the kettle with clean water, bring to boil and then discard the water. Repeat at least once or until no mineral deposits are left and the kettle will be ready to use.
4. Grasp the top of the scale filter and pull upwards to remove. Wash with clean water and dry thoroughly before replacing in the kettle.

# GOLDAIR

## SUPPORT AND TECHNICAL ADVICE

North Shore City, Auckland, New Zealand  
Monday – Friday 8am-5pm  
Phone: 0800 232 633  
Website: [www.goldair.co.nz](http://www.goldair.co.nz)

# GOLDAIR

Your Goldair product has been inspected and tested and is guaranteed subject to the following for a period to two years from the date of purchase against defects in workmanship and materials. During this period, such defects will be rectified by repair or replacement of the product purchased. Your product contains no user serviceable components and this warranty becomes invalid if in our opinion the product has been misused, abused, incorrectly installed, tampered with, connected to an electrical supply not corresponding with the name plate specification, or subjected to power surges. The warranty does not include any labour or other associated expense that may be involved in removal or installation of the product. Normal wear and tear is expressly excluded.

If your Goldair product fails to operate satisfactorily, please return it to the retailer from whom it was purchased. To obtain a repair or replacement product under this warranty, you will need to produce satisfactory evidence of date of purchase. The completed warranty and purchase receipt must be presented with the product. The warranty should be filled out at the time of purchase. It is in your interest to make sure this is done.

If the product is to be replaced (cannot be repaired) then that replacement will be of the same or similar product or accessory excluding packaging, instruction card etc. Where a replacement product is supplied, this shall be guaranteed for the balance of the original warranty period.

Any model that is no longer available will be replaced by a model of a value and with such features as we consider appropriate in the circumstances. Goldair Ltd is not responsible for freight forwarding charges, losses or damage in transit.

If service is required after the warranty period has expired, the product should be returned to a qualified electrical technician. Service outside of the warranty period will be at your cost.

Consumers Guarantee Act (1993).

In accordance with the above act consumers are advised that: The manufacturer does not undertake that repair facilities and parts are necessarily available for this product.

If any of the provisions of the foregoing are contrary to any relevant legislation, then that provision shall be deemed to be excluded from the warranty and the rest of the provisions will continue to apply.

## IMPORTANT: PLEASE RETAIN THIS WARRANTY CARD

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

PURCHASED FROM: \_\_\_\_\_

SUBURB: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_

NAME OF PRODUCT: \_\_\_\_\_

MODEL No: \_\_\_\_\_

**TWO YEAR WARRANTY**