

# GOLDAIR

## Popcorn Maker

Model FPM200

OPERATING INSTRUCTIONS – INCLUDES RECIPES



FPM200: 220-240V~, 50Hz, 1200-1400W

---

Thank you for choosing a GOLDAIR Popcorn Maker. This GOLDAIR appliance has been designed and manufactured to the highest standard and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

---

## GENERAL CARE AND SAFETY GUIDE

Please read all instructions carefully before using this appliance and keep them for future reference.

### ALWAYS

- ✓ Always ensure hands are dry before handling the plug or the Popcorn Maker.
- ✓ Always operate the Popcorn Maker on a secure, dry, level surface.
- ✓ Always allow adequate air space above and on all sides for air circulation. Do not allow the Popcorn Maker to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. Do not use under cupboards or curtains.
- ✓ Caution is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
- ✓ Always be sure to unplug from the socket when not in use and before cleaning.
- ✓ Always allow the Popcorn Maker to cool before cleaning and storing.
- ✓ Carry out regular checks of the supply cord to ensure no damage is evident.
- ✓ Return the Popcorn Maker after a malfunction, or if it has been damaged in any manner to an authorised electrician for examination, repair or adjustment as special purpose tools are required.


**CAUTION:** THE POPCORN MAKER LID AND BODY BECOME EXTREMELY HOT DURING USE. ALLOW THE UNIT TO COOL FOR 5 MINUTES BEFORE HANDLING.

THIS APPLIANCE IS NOT A TOY – ALWAYS SUPERVISE CHILDREN.

### NEVER

- ✗ Never touch hot surfaces.
- ✗ Never use this appliance outdoors.
- ✗ Never use this appliance for any purpose other than its intended use. This appliance is for household use only.
- ✗ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the Popcorn Maker by a person responsible for their safety.
- ✗ Close supervision is necessary when the appliance is near children.
- ✗ Never leave the appliance unattended.
- ✗ Never allow the power cord to overhang the edge of a table or bench top or touch any hot surface.
- ✗ Never place this appliance on or near a hot gas or electric burner or where it could touch a heated oven or microwave oven.
- ✗ Never immerse the Popcorn Maker's cord set or plug in water or any other liquid to protect against electrical hazards.
- ✗ Never place any part of this appliance in a dishwasher.
- ✗ Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any manner.
- ✗ The Popcorn Maker is not intended to be operated by means of an external timer or separate remote-control system. The use of an extension cord is not recommended.

# COMPONENTS

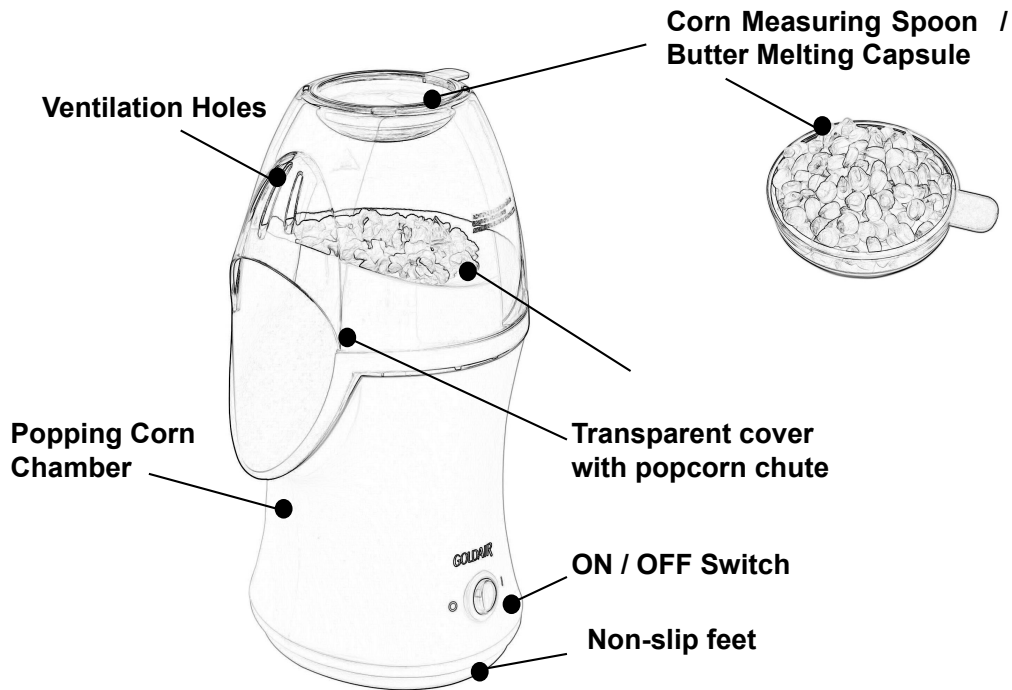

## OPERATING YOUR POPCORN MAKER

**NOTE:** Before using your Popcorn Maker for the first time, we recommend you clean the unit following the instructions under **CARE AND CLEANING**.

Place the Popcorn Maker on a flat, dry and level surface.

1. Remove the transparent cover from the main body.
2. Using the measuring spoon provided, measure one level spoon of popping corn and place it into the main chamber. One measuring spoon of kernels will make approximately 3 cups of popped corn. Do not use more than one spoon of corn in your Popcorn Maker at once. **NEVER PLACE BUTTER OR OIL IN THE POPPING CHAMBER.**
3. Reposition the transparent cover so it sits firmly on the body of the unit.
4. Place the measuring spoon in position on the top of the transparent cover.
5. If butter is required, place up to 2 tablespoons of chopped up butter in the measuring spoon. While the corn is popping, the butter will begin to melt. When popping has stopped, turn the unit off and allow the butter to melt for a further 3 minutes on top of the unit. For best results, we recommend the use of butter kept at room temperature.
6. Place a large bowl beneath the Popcorn Makers chute to catch the popped corn.
7. Insert the plug into a 220-240V 50Hz AC power outlet and switch the power on.
8. Turn the ON/OFF switch to the ON position.
9. The Popped corn will shoot out the chamber and into the bowl. When the rate of popping becomes less than about 1 per second, turn the ON/OFF switch to the OFF position. Allow the unit to cool for at least 2 minutes before removing the transparent cover. We recommend oven mitts are used to remove the cover. Due to variations in the kernels, you may find not all kernels have popped.
10. Ensure the appliance is turned off after use. Allow to cool before re-using, cleaning or storing.

## HELPFUL HINTS

- ★ This product uses hot air circulation in the popping chamber to pop the kernels. To avoid damaged to your Popcorn Maker, never add butter, oil or any other substance to the popping chamber.
- ★ Never use microwave popcorn in your Popcorn Maker.
- ★ Use only fresh popcorn kernels. Old or stale kernels may cause scorching or smoking during operation.
- ★ Take care when selecting the bowl for catching your popcorn.
  - A metal bowl may become hot, exercise caution when moving the bowl.
  - If using a plastic bowl, ensure it can withstand the heated air which flows from the Popcorn Maker while in use.

## CARE AND CLEANING

- ★ Turn the Popcorn Maker's ON/OFF switch to the OFF position and ensure it is unplugged from the power supply.
- ★ Ensure the unit has cooled fully prior to cleaning, reusing or storing.
- ★ Wash the transparent cover and measuring spoon in warm soapy water, rinse and dry thoroughly.
- ★ Use a soft, dry cloth to wipe the internal popping chamber.
- ★ Clean the base of the unit with a damp cloth and dry thoroughly.
- ★ Never immerse the Popcorn Maker's body, cord set or plug in water or any other liquid. Do not place any part of the appliance in a dishwasher.
- ★ Do not use abrasive cleaning products on this appliance.
- ★ Store the assembled appliance in a clean, dry area.

**CAUTION: DO NOT TOUCH THE POPCORN MAKER COVER DURING OR IMMEDIATELY AFTER OPERATION. THE UNIT WILL BE EXTREMELY HOT**

**DO NOT OPERATE THE POPCORN MAKER FOR MORE THAN 5 MINUTES AT A TIME. ALLOW A 10 MINUTE BREAK BETWEEN COOKING A SECOND CYCLE OF POPPED CORN, THIS WILL ALLOW THE UNITS MOTOR TO COOL DOWN.**

# RECIPES

## **Peanut Butter Popcorn**

1/2 cup of golden syrup  
1/2 cup of sugar  
1/2 cup of peanut butter  
1 teaspoon of vanilla  
6-8 cups of popped corn.

1. In a small pan, over medium heat melt together the golden syrup and sugar.
2. Add the peanut butter and stir until melted, do not allow the mixture to boil.
3. Remove from heat, add vanilla and stir.
4. Pour over popped corn.
5. Serve when cool.

## **Chocolate Lovers Popcorn**

1 1/2 cups of icing sugar  
1/2 cup cocoa  
1/2 teaspoon of cinnamon  
1/4 cup of butter or margarine  
6 cups of popped corn

1. Sift all three ingredients together
2. Spoon into an air tight glass jar and seal.
3. When ready to use, melt butter or margarine in a small saucepan over medium heat.
4. Measure out 1/4 of a cup of the Popcorn Mix and add to the melted butter.
5. Stir until well combined, remove from heat and drizzle over popped corn.
6. Serve when topping has cooled slightly.

## **Caramel Popcorn**

3/4 cup of brown sugar  
3/4 cup of white sugar  
1 tablespoon of butter  
3 tablespoons of water  
6 -8 cups of popped corn.

1. Mix brown sugar, white sugar, butter and water in a saucepan.
2. Bring the mixture to boil and boil until the mixture forms a thread (when a spoon is pulled out of the mixture a thread-like substance forms in the air).
3. Pour over popped corn.
4. Serve when the topping has cooled.

# **GOLDAIR**

## **SUPPORT AND TECHNICAL ADVICE**

North Shore City, Auckland, New Zealand  
Monday – Friday 8am-5pm  
Phone: 0800 232 633  
Website: [www.goldair.co.nz](http://www.goldair.co.nz)

# GOLDAIR

Your Goldair product has been inspected and tested and is guaranteed subject to the following for a period to two years from the date of purchase against defects in workmanship and materials. During this period, such defects will be rectified by repair or replacement of the product purchased. Your product contains no user serviceable components and this warranty becomes invalid if in our opinion the product has been misused, abused, incorrectly installed, tampered with, connected to an electrical supply not corresponding with the name plate specification, or subjected to power surges. The warranty does not include any labour or other associated expense that may be involved in removal or installation of the product. Normal wear and tear is expressly excluded.

If your Goldair product fails to operate satisfactorily, please return it to the retailer from whom it was purchased. To obtain a repair or replacement product under this warranty, you will need to produce satisfactory evidence of date of purchase. The completed warranty and purchase receipt must be presented with the product. The warranty should be filled out at the time of purchase. It is in your interest to make sure this is done.

If the product is to be replaced (cannot be repaired) then that replacement will be of the same or similar product or accessory excluding packaging, instruction card etc. Where a replacement product is supplied, this shall be guaranteed for the balance of the original warranty period.

Any model that is no longer available will be replaced by a model of a value and with such features as we consider appropriate in the circumstances. Goldair Ltd is not responsible for freight forwarding charges, losses or damage in transit.

If service is required after the warranty period has expired, the product should be returned to a qualified electrical technician. Service outside of the warranty period will be at your cost.

Consumers Guarantee Act (1993).

In accordance with the above act consumers are advised that: The manufacturer does not undertake that repair facilities and parts are necessarily available for this product.

If any of the provisions of the foregoing are contrary to any relevant legislation, then that provision shall be deemed to be excluded from the warranty and the rest of the provisions will continue to apply.

## IMPORTANT: PLEASE RETAIN THIS WARRANTY CARD

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

PURCHASED FROM: \_\_\_\_\_

SUBURB: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_

NAME OF PRODUCT: \_\_\_\_\_

MODEL No: \_\_\_\_\_

**TWO YEAR WARRANTY**