

# GOLDAIR

## Jaffle Sandwich Maker

Model FSM210

### OPERATING INSTRUCTIONS



FSM210: 220- 240V~, 50Hz, 650-780W, Jaffle Sandwich Maker

---

Thank you for choosing a Goldair Electric Jaffle Sandwich Maker. This Goldair appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

---

## GENERAL CARE AND SAFETY GUIDE

### ALWAYS

- ✓ Always ensure hands are dry before handling the plug or the Sandwich Maker.
- ✓ Always operate the Sandwich Maker on a secure, dry, level surface.
- ✓ Always allow adequate air space above and on all sides for air circulation. Do not allow the Sandwich Maker to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. Do not use under cupboards or curtains.
- ✓ Caution is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
- ✓ Always be sure to unplug from the socket when not in use and before cleaning.
- ✓ Always allow the Sandwich Maker to cool before cleaning and storing.
- ✓ Carry out regular checks of the supply cord to ensure no damage is evident.
- ✓ Return the Sandwich Maker after a malfunction, or if it has been damaged in any manner to an authorised electrician for examination, repair or adjustment as special purpose tools are required.
- ✓ Take care not to scratch the special coating of the cooking plate. Use a wooden or heat resistant plastic spatula.

### **CAUTION:**


THE SANDWICH MAKER GENERATES HEAT AND STEAM DURING USE. PROPER PRECAUTIONS MUST BE TAKEN TO PREVENT THE RISK OF BURNS, SCALDS, FIRES OR OTHER DAMAGE TO PERSONS.

### NEVER

- ✗ Never touch hot surfaces.
- ✗ Never use this appliance outdoors.
- ✗ Never use this appliance for any purpose other than its intended use. This appliance is for household use only.
- ✗ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the sandwich maker by a person responsible for their safety.
- ✗ Close supervision is necessary when the appliance is near children.
- ✗ Never leave the appliance unattended when in use.
- ✗ Never place this appliance on or near a hot gas or electric burner or where it could touch a heated oven or microwave oven.
- ✗ Exercise caution if using foodstuffs containing sugar or products containing jam or preserves, as the fillings may become very hot.
- ✗ Never immerse any part of the sandwich maker, or cord set and plug in water or any other liquid to protect against electrical hazards.
- ✗ Never use harsh, abrasive or caustic cleaners to clean this appliance.
- ✗ Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any manner.
- ✗ The sandwich maker is not intended to be operated by means of an external timer or separate remote-control system.

# COMPONENTS

FSM210

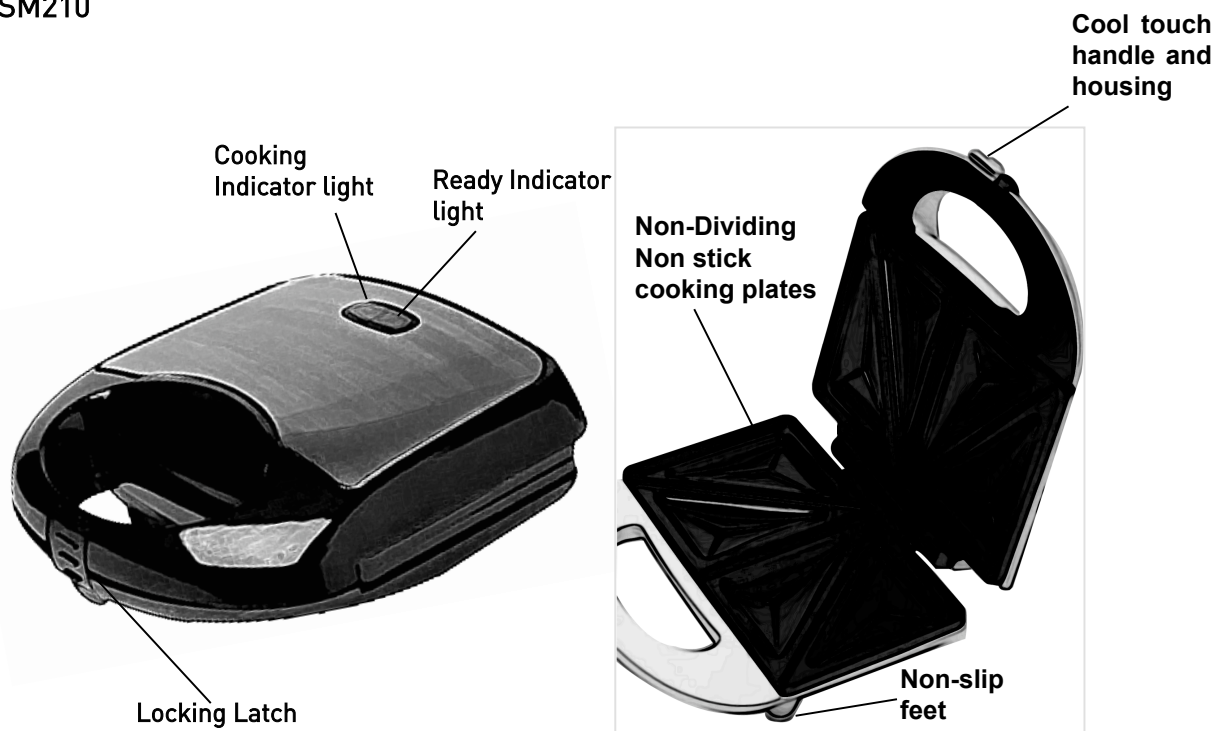

## OPERATING YOUR SANDWICH MAKER

1. Clean the surface of the non-stick cooking plates with a damp cloth, then dry.
2. Place the Sandwich Maker on a flat, dry and level surface with the lid closed.
3. Plug the Sandwich Maker into a suitable power outlet, corresponding with the rating label, 230-240V~.

**NOTE: When using your Sandwich Maker for the first time, you may notice the cooking plates smoke slightly. This is normal and will quickly disappear.**

4. The red power "On" light will illuminate to indicate the Sandwich Maker is heating up.
5. Prepare your sandwich while the appliance is heating up, buttering up to four pieces of bread and preparing your desired filling.
6. When the green "Ready" light illuminates, your sandwich maker is ready to use. Place two pieces of buttered bread onto the lower cooking plates, buttered side down. Place filling on top of the bread.
7. Add the top slice/s of bread and carefully close the Sandwich Maker lid, clipping the handles together with the locking latch. **Note:** The green light will turn on and off, while cooking to indicate the temperature is being maintained. Toasting will take approximately 3 minutes depending on individual preference and the type of bread and/or filling being used.
8. When the sandwich is cooked, remove using a wooden or heat resistant plastic spatula. Never use metal utensils as these can damage the non-stick surface.

**CAUTION: STEAM MAY BE EJECTED FROM BETWEEN THE PLATES DURING THE COOKING PROCESS. TAKE CARE NOT TO COME INTO CONTACT WITH THE STEAM AS IT MAY CAUSE BURNS.**

**ENSURE THE CORD HAS BEEN FULLY UNWOUND BEFORE EVERY USE.**

## OPERATING YOUR SANDWICH MAKER CONT..

7. To maintain heat, keep the sandwich maker lid closed until you are ready to cook the next sandwich.
8. Prepare additional sandwiches if required while others are cooking.
9. Unplug immediately after use and allow to cool before cleaning.

**CAUTION: ENSURE THE CORD HAS BEEN FULLY UNWOUND BEFORE EVERY USE.**

## FOR BEST RESULTS

1. Always pre-heat the Sandwich Maker before use.
2. For best results butter the outside of the bread before cooking. Flavored butters may also be used. The outside of the bread may be left unbuttered if required, however we recommend seasoning the cooking plates occasionally to avoid sticking. Seasoning will make your Sandwich Maker easier to clean.  
To season the cooking plates, pre-heat the Sandwich Maker then gently rub vegetable oil onto the plates, remove with absorbent paper.
3. Do not use spray on non-stick coatings in your Sandwich Maker as they may damage the cooking surface.
4. Be careful when biting into sandwiches containing sugar, cheese, tomatoes or jam as fillings may become very hot and burn.

## CARE AND CLEANING

Clean your Sandwich Maker after every use to prevent a build-up of baked-on foods. Prior to cleaning, ensure the Sandwich Maker has been disconnected from the power supply and the plug has been removed from the outlet.

Once the Sandwich Maker has cooled, wipe the cooking plates with a soft cloth. If stubborn baked-on food is present, brush the plates with a small amount of melted Butter or oil, allow to stand for approximately 5 minutes then wipe again with a damp cloth.

# GOLDAIR

### SUPPORT AND TECHNICAL ADVICE

North Shore City, Auckland, New Zealand

Monday – Friday 8am-5pm

Phone: 0800 232 633

Website: [www.goldair.co.nz](http://www.goldair.co.nz)

# GOLDAIR

**TWO YEAR WARRANTY**

Your Goldair product has been inspected and tested and is guaranteed subject to the following for a period to two years from the date of purchase against defects in workmanship and materials. During this period, such defects will be rectified by repair or replacement of the product purchased. Your product contains no user serviceable components and this warranty becomes invalid if in our opinion the product has been misused, abused, incorrectly installed, tampered with, connected to an electrical supply not corresponding with the name plate specification, or subjected to power surges. The warranty does not include any labour or other associated expense that may be involved in removal or installation of the product. Normal wear and tear is expressly excluded.

If your Goldair product fails to operate satisfactorily, please return it to the retailer from whom it was purchased. To obtain a repair or replacement product under this warranty, you will need to produce satisfactory evidence of date of purchase. The completed warranty and purchase receipt must be presented with the product. The warranty should be filled out at the time of purchase. It is in your interest to make sure this is done.

If the product is to be replaced (cannot be repaired) then that replacement will be of the same or similar product or accessory excluding packaging, instruction card etc. Where a replacement product is supplied, this shall be guaranteed for the balance of the original warranty period.

Any model that is no longer available will be replaced by a model of a value and with such features as we consider appropriate in the circumstances. Goldair Ltd is not responsible for freight forwarding charges, losses or damage in transit.

If service is required after the warranty period has expired, the product should be returned to a qualified electrical technician. Service outside of the warranty period will be at your cost.

Consumers Guarantee Act (1993).

In accordance with the above act consumers are advised that: The manufacturer does not undertake that repair facilities and parts are necessarily available for this product.

If any of the provisions of the foregoing are contrary to any relevant legislation, then that provision shall be deemed to be excluded from the warranty and the rest of the provisions will continue to apply.

## **IMPORTANT: PLEASE RETAIN THIS WARRANTY CARD**

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

PURCHASED FROM: \_\_\_\_\_

SUBURB: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_

NAME OF PRODUCT: \_\_\_\_\_

MODEL No: \_\_\_\_\_