

# GOLDAIR

CERAMIC FAN HEATER

OPERATING INSTRUCTIONS




For model: GCH310

## WARNINGS AND SAFEGUARDS

1. Use only the voltage specified on the rating plate of the appliance.
2. Keep all objects at least 1 metre from the front, sides and rear of the appliance. Do not place appliance close to radiant heat source.
3. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
5. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
6. This appliance is intended for household use only and not for commercial or industrial use.
7. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock or injury.
8. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
9. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always removed plug from the mains supply before cleaning.
10. Do not connect the appliance to mains voltage until completely assembled and adjusted.
11. Switch off and use handles provided when moving.
12. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
13. The use of an extension cord with this appliance is not recommended.
14. Do not remove plug from power socket until the appliance has been switched off.
15. Do not remove plug from power socket by pulling cord – always grip plug.
16. Always unplug appliance when not in use.
17. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
18. This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
19. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
20. When the appliance has been unpacked, check for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Goldair Customer Services Team. (refer to details on back page)
21. If your appliance does not work, or is not working properly, contact the place of purchase or the Goldair Customer Services Team. (refer to details on back page). Repair work on the appliance by unqualified persons can cause serious risk to the user.
22. There are no user serviceable parts installed in the unit.
23. Do not put your fingers or other articles into or near the air inlet or outlet. Do not sit on the unit.
24. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
25. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.
26. Indoor use only.
27. Children should be supervised to ensure that they do not play with the appliance.

## OVERVIEW OF GOLDAIR FAN HEATER

Your Goldair Fan Heater is designed to provide direct personal heating. The heater is equipped with two heat settings and a fan option to ensure your precise heating needs are met.

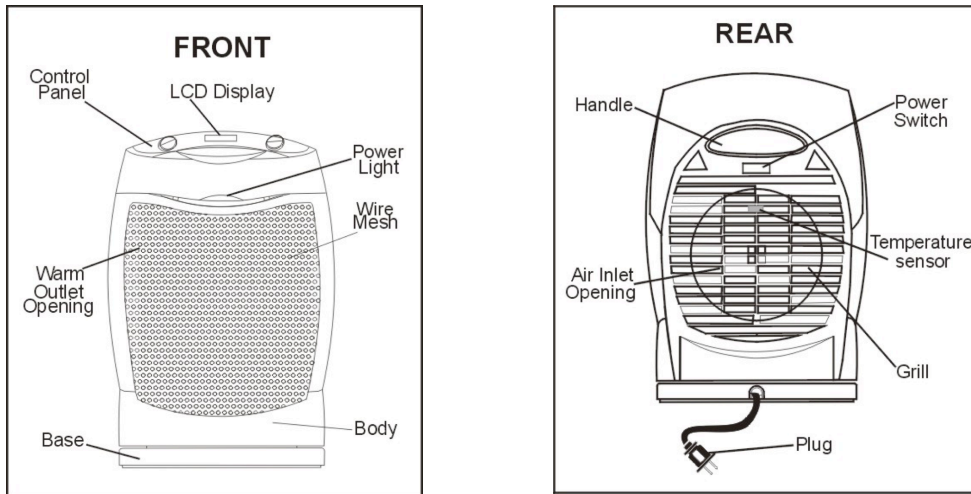




## OPERATING YOUR HEATER

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation, it should be used solely as a portable appliance.

## HEAT CONTROL SWITCH

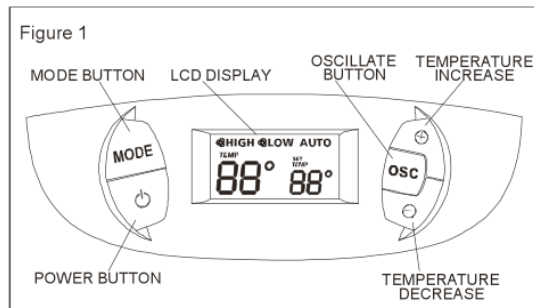The control switch positions are:



1. When the heater is plugged in and the power switch on the rear of the unit is turned on, there will be a "beep" and a power light to indicate that there is power to the unit. The light will remain lit until the power switch is turned off or the heater is unplugged from the outlet.
2. Press  button will start the heater, and press it again will shut the heater off.
3. Upon turning the heater on, the unit will be in the LOW heater mode, and the LCD will display the current air temperature.
4. When MODE button is pressed at this point, the heater will be set into HIGH heat mode.
5. Pressing the MODE button once more will set the heater into AUTO mode. Notice that the display now displays a SET TEMP indicator. (see THERMOSTAT INSTRUCTION)
6. Press the MODE button again and the heater will go back to LOW heat mode. Continuing to press the MODE button will cycle the unit through LOW, HIGH, AUTO mode.
7. Press OSC button, the heater will oscillate back and forth. Press it again and the oscillation will stop.
8. The heater must be placed on a flat, level surface.
9. To disconnect heater, press  button, and turn the power switch off, then remove plug from outlet.

## THERMOSTAT INSTRUCTION

Pressing the MODE button until the display shows AUTO mode.

To adjust set temperature, press the + button to increase the desired temperature and the - button to decrease the desired temperature.

When the air temperature raises 3 degrees above the set temperature, the heater will stop heating and the fan and oscillation will stop.

When the air temperature drops below the set temperature, the unit will come back on.

### SAFETY DEVICE ~ This appliance has two protection devices:

The first device, automatically disconnects & reconnects the appliance at a preset temperature, The second safety device disconnects the appliance permanently in case of overheating, by means of a thermal fuse. (It is non resettable)

### **IMPORTANT! ~ NEVER COVER THIS HEATER!**

Covering the heater will cause activation of the non resettable safety fuse.

## MAINTENANCE

**WARNING: ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE HEATER IN WATER.**

**CLEANING:** Clean the heater grill and filter net at least once a month, more often if dirty. A dirty filter could restrict the air flow and cause the heater to function improperly or shut down.

Do not attempt to remove inlet grill from the heater.

Unplug the heater from power source.

Vacuum rear grill area of heater with vacuum brush attachment to remove lint and dirt from internal filter.

**DO NOT ATTEMPT TO TAKE HEATER APART.** Do not remove grill guard or allow heater to be operated without grill guard in place. Clean the body with a soft cloth. (NEVER USE ALCOHOL OR SOLVENTS.)

**STORAGE:** Store the heater with these instructions in the original carton in a cool, dry place.

- The heater must not be located immediately below a socket-outlet.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically.

# **GOLDAIR**

SUPPORT AND TECHNICAL ADVICE

North Shore City, Auckland, New Zealand

Monday – Friday 8am-5pm

Phone: 0800 232 633

Website: [www.goldair.co.nz](http://www.goldair.co.nz)

# GOLDAIR

Your Goldair product has been inspected and tested and is guaranteed subject to the following for a period to two years from the date of purchase against defects in workmanship and materials. During this period, such defects will be rectified by repair or replacement of the product purchased. Your product contains no user serviceable components and this warranty becomes invalid if in our opinion the product has been misused, abused, incorrectly installed, tampered with, connected to an electrical supply not corresponding with the name plate specification, or subjected to power surges. The warranty does not include any labour or other associated expense that may be involved in removal or installation of the product. Normal wear and tear is expressly excluded.

If your Goldair product fails to operate satisfactorily, please return it to the retailer from whom it was purchased. To obtain a repair or replacement product under this warranty, you will need to produce satisfactory evidence of date of purchase. The completed warranty and purchase receipt must be presented with the product. The warranty should be filled out at the time of purchase. It is in your interest to make sure this is done.

If the product is to be replaced (cannot be repaired) then that replacement will be of the same or similar product or accessory excluding packaging, instruction card etc. Where a replacement product is supplied, this shall be guaranteed for the balance of the original warranty period.

Any model that is no longer available will be replaced by a model of a value and with such features as we consider appropriate in the circumstances. Goldair Ltd is not responsible for freight forwarding charges, losses or damage in transit.

If service is required after the warranty period has expired, the product should be returned to a qualified electrical technician. Service outside of the warranty period will be at your cost.

Consumers Guarantee Act (1993).

In accordance with the above act consumers are advised that: The manufacturer does not undertake that repair facilities and parts are necessarily available for this product.

If any of the provisions of the foregoing are contrary to any relevant legislation, then that provision shall be deemed to be excluded from the warranty and the rest of the provisions will continue to apply.

**IMPORTANT: PLEASE RETAIN THIS WARRANTY CARD**

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

PURCHASED FROM: \_\_\_\_\_

SUBURB: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_

NAME OF PRODUCT: \_\_\_\_\_

MODEL No: \_\_\_\_\_

TWO YEAR WARRANTY