

GOLDAIR

WALL MOUNTABLE CERAMIC HEATER

OPERATING INSTRUCTIONS



For model: GCH500

WARNINGS AND SAFEGUARDS

1. Use only the voltage specified on the rating plate of the appliance.
2. Keep all objects at least 1 metre from the front, sides and rear of the appliance. Do not place appliance close to radiant heat source.
3. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
5. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
6. This appliance is intended for household use only and not for commercial or industrial use.
7. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock or injury.
8. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
9. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always removed plug from the mains supply before cleaning.
10. Do not connect the appliance to mains voltage until completely assembled and adjusted.
11. Switch off and use handles provided when moving.
12. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
13. The use of an extension cord with this appliance is not recommended.
14. Do not remove plug from power socket until the appliance has been switched off.
15. Do not remove plug from power socket by pulling cord – always grip plug.
16. Always unplug appliance when not in use.
17. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
18. This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
19. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
20. When the appliance has been unpacked, check if for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Goldair Customer Services Team. (refer to details on back page)
21. If your appliance does not work, or is not working properly, contact the place of purchase or the Goldair Customer Services Team. (refer to details on back page). Repair work on the appliance by unqualified persons can cause serious risk to the user.
22. There are no user serviceable parts installed in the unit.
23. Do not put your fingers or other articles into or near the air inlet or outlet. Do not sit on the unit.
24. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
25. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.
26. Indoor use only.
27. Children should be supervised to ensure that they do not play with the appliance.

LOCATION

 
1. The appliance should be placed with a minimum distance of 90 cm away from flammable objects (e.g. curtains), walls or other structures!
2. Installation of the heater on the wall **MUST BE** 1.8m high from the floor and the heater location **MUST NOT** be directly below a main power socket.

POWER CORD

1. Use only an approved extension cord that is suitable for the appliance rating!
2. Do not lay the cord under a carpet. Do not lay rugs, mats or similar articles on it. Position the cord so that it does not pose an obstruction or a tripping hazard.
3. Never pull the plug out of the socket at the cord!
4. Always disconnect the mains plug when the appliance is not in use.

Attention! The appliance may only be used for normal domestic use and not for industrial purpose.


KNOW YOUR HEATER

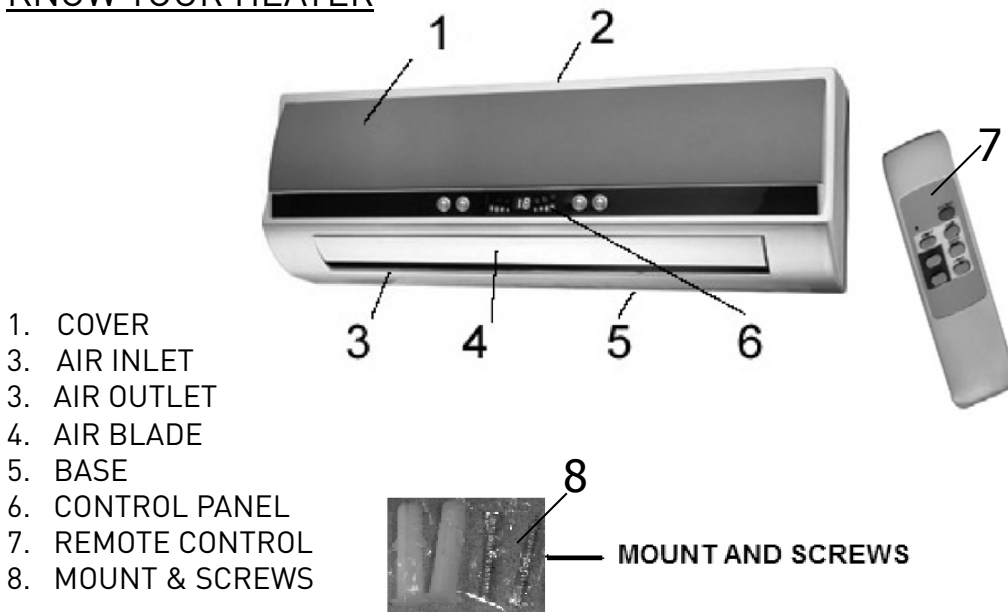



BEFORE USE

1. Before use, remove all packaging and inspect the appliance for any damages. If there are appears to be any damages, please take back to place of purchase for a replacement.
2. Ensure that all the accessories are included as per diagram above before you can continue with the installation.
3. Ensure that the location of the heater installed is not directly under a power socket and that a power socket is available to power the appliances for use.
4. Refer to the installation guide for further instruction.

 INSTALLATION

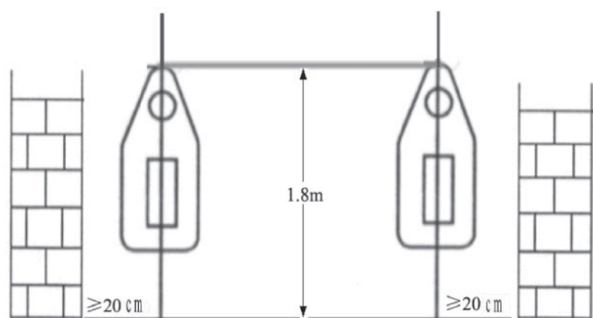

Drill two holes on the wall allowing 1.8meters above the floor and 20cm from side walls. Be sure to make the hole diameter just as same as the expanding screw pipe. Place the expanding screw pipe into the hole in the wall and then fix two screws on the expanding pipe, keep the tips of the screws out for 10mm, and hang up the heater. Ensure that the screws are strong enough. Screw and screw mounts are provided.

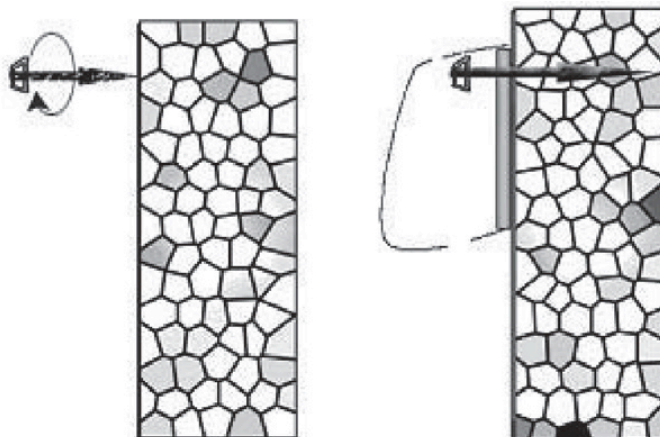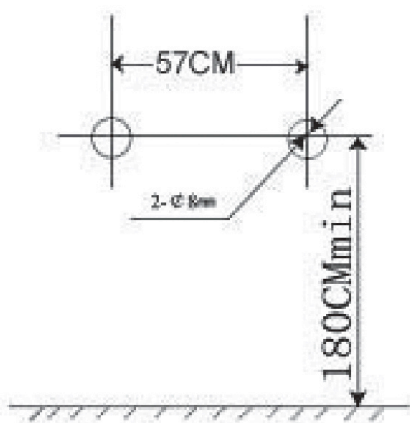  

WARNING: DO NOT MOUNT DIRECTLY UNDER AN ELECTRICAL POWER SOCKET.

WARNING: WHEN INSTALLED IN THE BATHROOM, THE LOCATION OF THE HEATER IS SO THAT SWITCHES AND OTHER CONTROLS CANNOT BE TOUCHED BY A PERSON IN THE BATH OR SHOWER.

Please read these instructions carefully and keep for future reference.

USING THE HEATER


Before inserting the plug in electrical outlet, make sure that the correct voltage being used corresponds to what is indicated on the rating label on the unit.


This instruction will apply to both the control panel on the heater and on the remote.

Plug the unit into the main power supply, and then switch the ON the main power supply.

FAN MODE:

Remote & Manual:


1) Press  button, the fan heater will switch ON, wind door open and the fan will blow. The LCD screen will display the room temperature.



2) To switch the fan OFF, press  button.


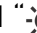 
NOTE: To assist in maintaining the internal components, after pressing the OFF button the fan will continue to blow room air for a period of 30-60 seconds before shutting down to standby.




HEATINGMODE:


Manual:

1) Press  button, the heater will switch ON, wind door open and the fan will blow.

2) Press  button once, to operate at 1000W mode. One "SUN"  indicator will light up.

 
3) Press  button again, to operate at 2000W mode. The second "SUN"  indicator will light up.

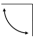4) Press  button, to operate the Oscillation mode. The two "SUN"  indicator and the "SWING"  indicator light up together.




5) To switch the heater OFF anytime, press  button, the "FAN" indicator flashes. The fan heater will continue to operate for 30 -60 sec, and then it will switch OFF.


REMOTE:

1) Press  button, the heater will switch ON and the fan will blow.

2) Press the 'MODE' button once, to operate at 1000W mode. The "SUN"  indicator will light up.

3) Press the 'MODE' button again, to operate at 2000W mode. The second "SUN"  indicator will light up.


4) Press the SWING  button, to operate the Oscillation mode. The "SUN"  indicator and the "SWING"  indicator light up together.


5) To switch the heater OFF anytime, press  button, the "FAN" indicator flashes. The fan heater will continue to operate for 30 -60 seconds, and then it will switch OFF.

NOTE: The heater will switch OFF after 30-60 seconds of operation. This will allow the fan heater to cool off.


TIMER FUNCTION:

Timer function allows the fan heater to operate continuously for 1hour. intervals, and can be programmed up to 8 hours before automatically turning OFF. This instruction applies for both Manual and Remote operation.

1) Press TIME /  button once for 1h operation before turning OFF.

2) Press TIME/  button again for 2 hours. Repeat this process until the desire time duration of operation before automatic switch OFF.

3) The time indicator will light up in screen, example, if the timer is programmed to operate 5hours, 5 digital will display in screen.

4) To remove the timer function. Press TIME/  button until time indicators are OFF (no light up).

THERMOSTAT ADJUSTMENT:

Remote Control Only:

- 1) Operate the Heating Mode as per above instructions.
- 2) The LCD screen will display the room temperature, to adjust the temperature, press “+” to increase the desired temperature and “-” to decrease the desired temperature.
- 3) When the air temperature reaches 1 degree above the set temperature, the heater will cut off. The heater stops working but the fan continues working to allow the product to cool down and maintain the temperature.
- 4) When the air temperature drops 3 degree below the set temperature, the unit will come back on.
- 5) Temperature can be set from 10 degrees to 49 degrees, by pressing the “+” and “-”.
- 6) Press the CANCEL button to cancel programmed temperature.

BATTERY

The remote control use 2 x AAA battery. We recommend the use of Lithium type battery for longer use. Note: Please follow battery disposal instruction on battery packaging, or contact your local councils for safely disposal of batteries.

SAFETY SYSTEM

- * In the event of abnormal overheating, a safety device shuts down the appliance automatically. After a short cooling down phase, the appliance is ready for use again.
- If you still notice the same defect as above mentioned, remove the plug from the socket and consult your authorized dealer to your after-sales service department.
- During use, do not touch or cover the air outlet. This may cause the unit to over heat, and the safety device to operate.

MAINTENANCE

- Your appliance must be switched OFF via the main power supply and unplugged before proceeding with any cleaning work.
- Clean the housing with a lightly damp cloth, a vacuum cleaner or a dusting brush.
- Never use flammable or abrasive cleaning agents such as benzene or spirit to clean the appliance.
- Never immerse the appliance in water!
- Clean the air inlet and outlet regularly with a vacuum cleaner.
- If the appliance is not used for an extended period it must be protected against excessive dust and dirt. Please dismount the heater and store in a dry place away from sunlight and dirt.

SPECIFICATIONS

Model No GCH500

Voltage 220-240V AC

Frequency 50/60Hz

Output Power (W) 2000W max.

SAFETY DEVICE ~ This appliance has two protection devices:

The first device, automatically disconnects & reconnects the appliance at a preset temperature,
The second safety device disconnects the appliance permanently in case of overheating, by means of a
thermal fuse. (It is non resettable)

IMPORTANT! ~ NEVER COVER THIS HEATER!

Covering the heater will cause activation of the non resettable safety fuse.

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

North Shore City, Auckland, New Zealand

Monday – Friday 8am-5pm

Phone: 0800 232 633

Website: www.goldair.co.nz

GOLDAIR

Your Goldair product has been inspected and tested and is guaranteed subject to the following for a period to two years from the date of purchase against defects in workmanship and materials. During this period, such defects will be rectified by repair or replacement of the product purchased. Your product contains no user serviceable components and this warranty becomes invalid if in our opinion the product has been misused, abused, incorrectly installed, tampered with, connected to an electrical supply not corresponding with the name plate specification, or subjected to power surges. The warranty does not include any labour or other associated expense that may be involved in removal or installation of the product. Normal wear and tear is expressly excluded.

If your Goldair product fails to operate satisfactorily, please return it to the retailer from whom it was purchased. To obtain a repair or replacement product under this warranty, you will need to produce satisfactory evidence of date of purchase. The completed warranty and purchase receipt must be presented with the product. The warranty should be filled out at the time of purchase. It is in your interest to make sure this is done.

If the product is to be replaced (cannot be repaired) then that replacement will be of the same or similar product or accessory excluding packaging, instruction card etc. Where a replacement product is supplied, this shall be guaranteed for the balance of the original warranty period.

Any model that is no longer available will be replaced by a model of a value and with such features as we consider appropriate in the circumstances. Goldair Ltd is not responsible for freight forwarding charges, losses or damage in transit.

If service is required after the warranty period has expired, the product should be returned to a qualified electrical technician. Service outside of the warranty period will be at your cost.

Consumers Guarantee Act (1993).

In accordance with the above act consumers are advised that: The manufacturer does not undertake that repair facilities and parts are necessarily available for this product.

If any of the provisions of the foregoing are contrary to any relevant legislation, then that provision shall be deemed to be excluded from the warranty and the rest of the provisions will continue to apply.

IMPORTANT: PLEASE RETAIN THIS WARRANTY CARD

NAME: _____

ADDRESS: _____

PURCHASED FROM: _____

SUBURB: _____

DATE OF PURCHASE: _____

NAME OF PRODUCT: _____

MODEL No: _____

TWO YEAR WARRANTY