

GOLDAIR

CONVECTOR HEATER WITH TIMER

OPERATING INSTRUCTIONS



For model: GCV300

WARNINGS AND SAFEGUARDS

1. Use only the voltage specified on the rating plate of the appliance.
2. Keep all objects at least 1 metre from the front, sides and rear of the appliance. Do not place appliance close to radiant heat source.
3. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
5. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
6. This appliance is intended for household use only and not for commercial or industrial use.
7. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock or injury.
8. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
9. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always removed plug from the mains supply before cleaning.
10. Do not connect the appliance to mains voltage until completely assembled and adjusted.
11. Switch off and use handles provided when moving.
12. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
13. The use of an extension cord with this appliance is not recommended.
14. Do not remove plug from power socket until the appliance has been switched off.
15. Do not remove plug from power socket by pulling cord – always grip plug.
16. Always unplug appliance when not in use.
17. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
18. This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
19. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
20. When the appliance has been unpacked, check if for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Goldair Customer Services Team. (refer to details on back page)
21. If your appliance does not work, or is not working properly, contact the place of purchase or the Goldair Customer Services Team. (refer to details on back page). Repair work on the appliance by unqualified persons can cause serious risk to the user.
22. There are no user serviceable parts installed in the unit.
23. Do not put your fingers or other articles into or near the air inlet or outlet. Do not sit on the unit.
24. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
25. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.

OVERVIEW OF GOLDAIR CONVECTOR HEATER

Your Goldair Convector Heater is equipped with three heat settings and a thermostat to ensure your precise heating needs are met. In addition the heater has a fan boost option which assists with circulating warm air through your room. To enable you to set the heater to come ON and OFF when you require it the appliance is fitted with a 24 hour mechanical timer.

OPERATING YOUR HEATER

Before operation place the product on a flat, stable, heat-resistant surface. Plug the power cord into a standard 230/240 volt AC electrical outlet.


- To turn the heater ON position the MODE switch to I
- For LOW heat press the I heat switch
- For MEDIUM heat press the II heat switch
- For HIGH heat press the I and II heat switches.
- To turn the heater OFF position the mode switch to (0).

THERMOSTAT

Turn the thermostat dial until the maximum temperature is obtained on the graduated scale. When the desired room temperature is reached, slowly turn the knob anti-clockwise until the heater turns off (you will hear a click). The temperature will now remain constant, regulated by the thermostat.

TIMER

- Set the MODE switch to the Timer position (this function can only be used once a heat level has been selected (see thermostat, power settings).
- Turn the outer dial of the timer in a clockwise direction until the time of the day (24-hour clock) corresponds with the triangular marking. One complete turn of the dial corresponds to 24 hours.
- There are 96 "riders", positioned around the dial, each rider represents 15 minutes. When the "riders" are pushed out the heater will turn on when they travel past the triangle marking on the casing. You need to push out the riders to correspond with the time the heater is to turn on.

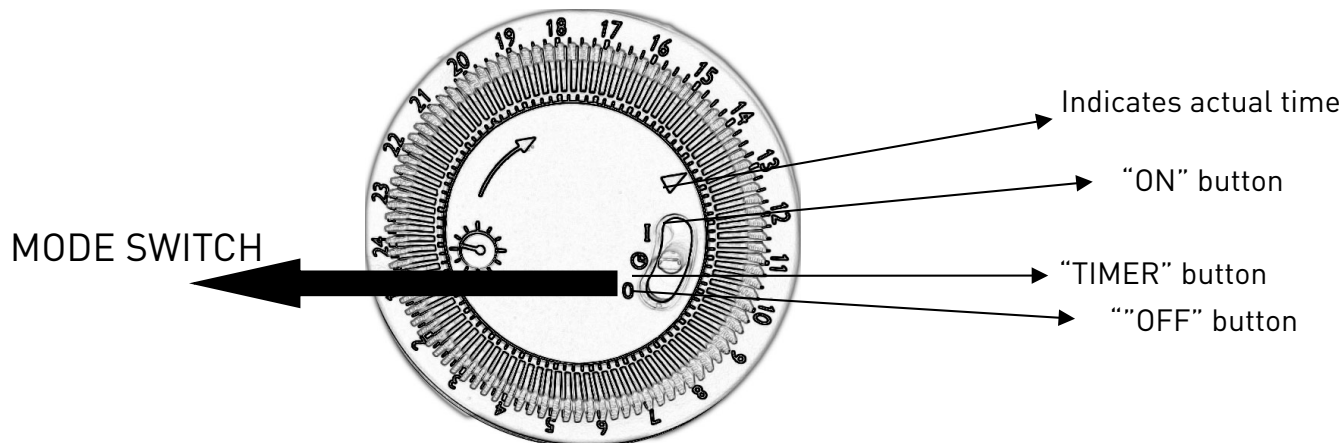

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase. (Refer to back of booklet).

ADDITIONAL WARNINGS AND SAFEGUARDS

- WARNING : In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically.

SAFETY DEVICE ~ This appliance has two protection devices:

The first device, automatically disconnects & reconnects the appliance at a preset temperature,
The second safety device disconnects the appliance permanently in case of overheating, by means of a thermal fuse. (It is non resettable)

IMPORTANT! ~ NEVER COVER THIS HEATER!

Covering the heater will cause activation of the non resettable safety fuse.

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

North Shore City, Auckland, New Zealand

Monday – Friday 8am-5pm

Phone: 0800 232 633

Website: www.goldair.co.nz

GOLDAIR

Your Goldair product has been inspected and tested and is guaranteed subject to the following for a period to two years from the date of purchase against defects in workmanship and materials. During this period, such defects will be rectified by repair or replacement of the product purchased. Your product contains no user serviceable components and this warranty becomes invalid if in our opinion the product has been misused, abused, incorrectly installed, tampered with, connected to an electrical supply not corresponding with the name plate specification, or subjected to power surges. The warranty does not include any labour or other associated expense that may be involved in removal or installation of the product. Normal wear and tear is expressly excluded.

If your Goldair product fails to operate satisfactorily, please return it to the retailer from whom it was purchased. To obtain a repair or replacement product under this warranty, you will need to produce satisfactory evidence of date of purchase. The completed warranty and purchase receipt must be presented with the product. The warranty should be filled out at the time of purchase. It is in your interest to make sure this is done.

If the product is to be replaced (cannot be repaired) then that replacement will be of the same or similar product or accessory excluding packaging, instruction card etc. Where a replacement product is supplied, this shall be guaranteed for the balance of the original warranty period.

Any model that is no longer available will be replaced by a model of a value and with such features as we consider appropriate in the circumstances. Goldair Ltd is not responsible for freight forwarding charges, losses or damage in transit.

If service is required after the warranty period has expired, the product should be returned to a qualified electrical technician. Service outside of the warranty period will be at your cost.

Consumers Guarantee Act (1993).

In accordance with the above act consumers are advised that: The manufacturer does not undertake that repair facilities and parts are necessarily available for this product.

If any of the provisions of the foregoing are contrary to any relevant legislation, then that provision shall be deemed to be excluded from the warranty and the rest of the provisions will continue to apply.

IMPORTANT: PLEASE RETAIN THIS WARRANTY CARD

NAME: _____

ADDRESS: _____

PURCHASED FROM: _____

SUBURB: _____

DATE OF PURCHASE: _____

NAME OF PRODUCT: _____

MODEL No: _____

TWO YEAR WARRANTY