

GOLDAIR

CONVECTOR HEATER

OPERATING INSTRUCTIONS



For models: GCV350, GCV355

WARNINGS AND SAFEGUARDS

1. Use only the voltage specified on the rating plate of the appliance.
2. Keep all objects at least 1 metre from the front, sides and rear of the appliance. Do not place appliance close to radiant heat source.
3. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
5. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
6. This appliance is intended for household use only and not for commercial or industrial use.
7. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock or injury.
8. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
9. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always removed plug from the mains supply before cleaning.
10. Do not connect the appliance to mains voltage until completely assembled and adjusted.
11. Switch off and use handles provided when moving.
12. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
13. The use of an extension cord with this appliance is not recommended.
14. Do not remove plug from power socket until the appliance has been switched off.
15. Do not remove plug from power socket by pulling cord – always grip plug.
16. Always unplug appliance when not in use.
17. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
18. This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
19. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
20. When the appliance has been unpacked, check if for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Goldair Customer Services Team. (refer to details on back page)
21. If your appliance does not work, or is not working properly, contact the place of purchase or the Goldair Customer Services Team. (refer to details on back page). Repair work on the appliance by unqualified persons can cause serious risk to the user.
22. There are no user serviceable parts installed in the unit.
23. Do not put your fingers or other articles into or near the air inlet or outlet. Do not sit on the unit.
24. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
25. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.
26. Indoor use only.
27. Children should be supervised to ensure that they do not play with the appliance.

ASSEMBLY INSTRUCTIONS

This heater may be used with feet on the floor or attached directly to the wall.

For floor use, attach the feet to the lower part of the heater by snapping each foot into the matching holes. Firmly press each foot until a "click" is heard. Use the two small screws provided to fasten feet in place. Place the heater on a firm, level, open surface at least 90 cm away from any other object. DO NOT use on an unstable surface such as bedding or deep carpeting.

For wall mounting, secure the wall attachment clips into the wall with the screws provided. DO NOT install this heater in the immediate surroundings of a bath, a shower or swimming pool.

Attach the wall spacers on the back of the heater to keep the minimum distance to the wall. Attach the heater to the mounting clips, using the mounting holes on the back of the heater.

OPERATION INSTRUCTIONS

Turn the switch to (0).

Plug the heater into an outlet.

Turn the switch to the desired power, (I-Low, II-Medium, III-High). The fan will operate on power setting III-High. (GCV355 Model Only)

Turn the thermostat clockwise to its highest setting for a rapid warming.

When the room reaches a comfortable temperature, turn the thermostat anticlockwise until the heater switches off. At this setting, the thermostat will automatically turn the heater on (the pilot light illuminates) and off (the pilot light goes out) to maintain the selected temperature.

To turn the heater off, turn the switch to the (0) position and unplug it.

FROST PROTECTION

The convector is equipped with anti-frost function. Plug in the heater. Turn the switch to I, II or III. Turn the thermostat anticlockwise to its lowest setting (d). As soon as the room temperature is below + 6° C the heater will automatically switch on.

AUTOMATIC SAFETY CUT-OUT

This product is equipped with an automatic safety cut-out. If the heater stops unexpectedly, the safety cut-out may have operated. Once the safety cut has operated, the heater will not restart until the heater has been turned off and cooled down. In this situation, it is recommended to turn the switch to the (0) position and unplug it. Allow the heater to cool. Plug the heater into a socket and follow the "Operating Instructions".

CLEANING

We recommend to clean the heater at least once a month. Switch off the heater, unplug it and allow to cool. Use a damp cloth to clean ONLY the external surfaces of the heater. Do not use any abrasive or caustic cleaning agents. Never immerse the heater in water! We recommend to clean the heater at least once a month.

ADDITIONAL WARNING AND SAFEGUARDS

- WARNING : In order to avoid overheating, do not cover the heater
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically.

SAFETY DEVICE ~ This appliance has two protection devices:

The first device, automatically disconnects & reconnects the appliance at a preset temperature, The second safety device disconnects the appliance permanently in case of overheating, by means of a thermal fuse. (It is non resettable)

IMPORTANT! ~ NEVER COVER THIS HEATER!

Covering the heater will cause activation of the non resettable safety fuse.

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

North Shore City, Auckland, New Zealand

Monday – Friday 8am-5pm

Phone: 0800 232 633

Website: www.goldair.co.nz

GOLDAIR

Your Goldair product has been inspected and tested and is guaranteed subject to the following for a period to two years from the date of purchase against defects in workmanship and materials. During this period, such defects will be rectified by repair or replacement of the product purchased. Your product contains no user serviceable components and this warranty becomes invalid if in our opinion the product has been misused, abused, incorrectly installed, tampered with, connected to an electrical supply not corresponding with the name plate specification, or subjected to power surges. The warranty does not include any labour or other associated expense that may be involved in removal or installation of the product. Normal wear and tear is expressly excluded.

If your Goldair product fails to operate satisfactorily, please return it to the retailer from whom it was purchased. To obtain a repair or replacement product under this warranty, you will need to produce satisfactory evidence of date of purchase. The completed warranty and purchase receipt must be presented with the product. The warranty should be filled out at the time of purchase. It is in your interest to make sure this is done.

If the product is to be replaced (cannot be repaired) then that replacement will be of the same or similar product or accessory excluding packaging, instruction card etc. Where a replacement product is supplied, this shall be guaranteed for the balance of the original warranty period.

Any model that is no longer available will be replaced by a model of a value and with such features as we consider appropriate in the circumstances. Goldair Ltd is not responsible for freight forwarding charges, losses or damage in transit.

If service is required after the warranty period has expired, the product should be returned to a qualified electrical technician. Service outside of the warranty period will be at your cost.

Consumers Guarantee Act (1993).

In accordance with the above act consumers are advised that: The manufacturer does not undertake that repair facilities and parts are necessarily available for this product.

If any of the provisions of the foregoing are contrary to any relevant legislation, then that provision shall be deemed to be excluded from the warranty and the rest of the provisions will continue to apply.

IMPORTANT: PLEASE RETAIN THIS WARRANTY CARD

NAME: _____

ADDRESS: _____

PURCHASED FROM: _____

SUBURB: _____

DATE OF PURCHASE: _____

NAME OF PRODUCT: _____

MODEL No: _____

TWO YEAR WARRANTY